

Boostcap[®] - Fact Sheet

G17930 - Maxwell BCAP 3000E 3000 Farad 2.7VDC BOOSTCAP

Stripe indicates (+) positive terminal. Do not connect to voltage higher than 2.7VDC per capacitor. When you first connect your Boostcap[®] to a power supply, it will look like a "short" and draw current at the maximum available from your supply - the current flow will reduce as it charges up. Make sure to observe the polarity or you will ruin it (+ positive is the stripe).

Note: The threads have a small amount of thread locking compound on them, just use an adjustable wrench to tighten or remove the nut.



↑ Stripe (+)